



Supported Devices	Alarm Management	ATM Access Management*	ATM and VLAN Management	Bridge Management	CoreBuilder 5000 Manager	Device View	Inventory Manager	LANsentry Manager	LinkConverter Manager	NETBuilder Assistant	Network Admin Tools	Status View	Token Ring Manager**
AccessBuilder 7000 BRI and PRI Cards					◆								
AccessBuilder 9600		◆											
CoreBuilder 2500			◆		◆		◆			◆	◆		
CoreBuilder 3500			◆		◆		◆				◆		
CoreBuilder 4000			◆							◆			
CoreBuilder 5000			◆	◆			◆						
CoreBuilder 5000 ATM Control Point			◆	◆			◆						
CoreBuilder 5000 Controller&Mgmt Modules			◆	◆			◆			◆			
CoreBuilder 5000 FastModule	◆		◆	◆	◆	◆	◆						
CoreBuilder 5000 SwitchModule			◆	◆			◆					◆	
CoreBuilder 6000					◆		◆			◆	◆		
CoreBuilder 7000			◆							◆			
CoreBuilder 7000 HD			◆							◆			
CoreBuilder 7X00 Modules			◆							◆			
FMS Token Ring Range							◆						◆
Focus Hubs													◆
LANPlex 2016					◆					◆	◆		
LANPlex 5000										◆	◆		
LinkBuilder 3GH												◆	
LinkBuilder ECS				◆	◆								
LinkBuilder FDDI					◆								
LinkBuilder FMS & FMS II	◆				◆		◆			◆	◆		
LinkBuilder FMS 100	◆				◆								
LinkBuilder MSH	◆		◆		◆		◆			◆			◆
LinkBuilder TP/8i	◆				◆					◆	◆		
LinkBuilder TR/TRi Hubs													◆
LinkConverter								◆		◆			
LinkSwitch 500			◆										
LinkSwitch 1000	◆		◆	◆	◆		◆			◆	◆		

Read the Release Notes followed by the Installation Guide and the Getting Started Guide before using Transcend software. For detailed information on supported devices, see Appendix A in the application user guides.

To display and configure devices and to display basic statistics for supported devices, install Device View and CoreBuilder 5000 Manager. To monitor and diagnose supported devices, install Status View (performance) and/or LANsentry Manager (RMON/RMON2). For expert configuration, install Network Admin Tools.

* ATM Access Management supports Solaris 2.4, 2.5, and 2.5.1 with Runtime Motif 1.23.

** If you are using Token Ring Manager to manage a device, you should also use Token Ring Manager to manage RMON within that device. FMS TR and SuperStack II Hub TR require Agent version 3.5 or higher.



Transcend® Enterprise Manager

Version 4.2.2 for UNIX®

Device Support Matrix

Supported Devices

Alarm Management
 ATM Access Management*
 ATM and VLAN Management
 Bridge Management
 CoreBuilder 5000 Manager
 Device View
 Inventory Manager
 LANsentry Manager
 LinkConverter Manager
 NETBuilder Assistant
 Network Admin Tools
 Status View
 Token Ring Manager**

Device	Alarm Management	ATM Access Management*	ATM and VLAN Management	Bridge Management	CoreBuilder 5000 Manager	Device View	Inventory Manager	LANsentry Manager	LinkConverter Manager	NETBuilder Assistant	Network Admin Tools	Status View	Token Ring Manager**
LinkSwitch 1200						◆							
LinkSwitch 1200 for MSH						◆							
LinkSwitch 2200						◆				◆		◆	
LinkSwitch 2700			◆										◆
LinkSwitch 3000	◆		◆	◆		◆		◆					◆
MSH Switch 1005	◆			◆		◆		◆					
NETBuilder	◆					◆	◆		◆	◆			
NETBuilder II	◆		◆			◆	◆		◆	◆	◆		
OfficeConnect Hub 8/TPM	◆					◆		◆			◆	◆	
OfficeConnect NETBuilder	◆					◆	◆		◆	◆	◆		
OfficeConnect Remote 511, 521, 531						◆							
OfficeConnect Switch 140M	◆					◆		◆					
ONline Controller Mgmt Module					◆								
ONline Hubs					◆			◆					
ONsemble Hubs					◆			◆					
SuperStack II Advanced RPS						◆							
SuperStack II Desktop Switch	◆			◆		◆		◆					
SuperStack II Dual Speed Hub 500	◆					◆		◆					
SuperStack II Hub 10	◆					◆		◆			◆		
SuperStack II Hub 100	◆					◆		◆			◆		
SuperStack II Hub TR								◆					◆
SuperStack II LinkConverter II								◆			◆		
SuperStack II NETBuilder	◆					◆	◆		◆	◆	◆		
SuperStack II NETBuilder SI	◆					◆	◆		◆	◆	◆		
SuperStack II PS Hub 40	◆					◆		◆					
SuperStack II PS Hub 50	◆					◆		◆					
SuperStack II Switch 1000	◆		◆	◆		◆		◆			◆	◆	
SuperStack II Switch 1100	◆					◆		◆					
SuperStack II Switch 2000 TR				◆		◆							◆
SuperStack II Switch 2200						◆					◆	◆	
SuperStack II Switch 2700				◆									
SuperStack II Switch 3000	◆		◆	◆		◆		◆			◆	◆	
SuperStack II Switch 3000 10/100	◆		◆			◆							
SuperStack II Switch 9000 SX						◆		◆					

To learn more about 3Com products, visit our World Wide Web site at <http://www.3com.com>.

3Com Corporation P.O. Box 58145, 5400 Bayfront Plaza, Santa Clara, CA 95052-8145 Phone: 800-NET-3Com or 408-764-5000 Fax: 408-764-5001

Copyright © 1997 3Com Corporation. All rights reserved. 3Com, AccessBuilder, EtherLink, LANplex, LANsentry, LinkBuilder, LinkSwitch, NETBuilder, NETBuilder II, OfficeConnect, ONcore, ONsemble, SmartAgent, SoftHub, SuperStack, TokenLink, and Transcend are registered trademarks of 3Com Corporation. CoreBuilder, Focus, MSH, and ONline, are trademarks of 3Com Corporation.

Printed in U.S.A. on recycled paper. p/n 92-0231-002