



1000BASE-SX Gigabit Ethernet Module Installation Guide

For the CoreBuilder™ 3500 System

Module Description

This module contains one Gigabit Ethernet 1000BASE-SX port that uses a fiber (SC) connector, providing a 1000 Mbps Gigabit Ethernet connection over fiber optic cable. You can remove and replace the module with the CoreBuilder 3500 system on.

For a description of how to configure this module into your network, see the *CoreBuilder 3500 Getting Started Guide*.



To use the 1000BASE-SX Gigabit Ethernet module, your system needs software release 1.1.0. Download this software from the following 3Com Web site:

<http://infodeli.3Com.com/infodeli/swlib/index.htm>



Status LEDs

The module and the Gigabit Ethernet port each contain three LEDs. See the following table for a description of the LEDs.

Status	LED	Name	Color	Description
Module Status	PWR	Power	Green	The module is receiving power.
	INS	Board Inserted	Green	The module is inserted.
			Yellow	The module is partially inserted.
Port Status	ERR	Board Error	Yellow	The module did not successfully complete the power-up diagnostics.
			Blinking Yellow	A hardware/software incompatibility has occurred. Be sure that you have loaded software release 1.1.0.
	L	Link	Green	The associated port is active.
E	Error	Yellow	A error condition has occurred with the associated port, or the port has been disabled through the Administration Console.	
T	Traffic	Blinking Green	The port is receiving or transmitting data.	

Audience Description This guide is intended for **trained technical personnel** only. Do not attempt to remove or replace a CoreBuilder 3500 1000BASE-SX Fast Ethernet module if you do not have the proper training from 3Com. For training information, call 1-800-NET-3COM.



WARNING: Hazardous energy exists within the CoreBuilder system. Use extreme caution when removing or replacing the 1000BASE-SX Fast Ethernet module. Always be careful to avoid electric shock or equipment damage. See "Safety Precautions" next.

Safety Precautions

Be sure to follow all safety precautions when you replace components in the CoreBuilder 3500 system. To avoid electric shocks, burns, or equipment damage, read and follow these warnings:



WARNINGS: When the system is on, never insert a metal object such as a screwdriver or a finger with jewelry into open module slots.

When the system is on, do not touch any connections inside the chassis with your hands or fingers. Do not insert metal objects into the backplane.

ESD Safety Information

Electrostatic discharge (ESD) can damage components on the module. ESD, which occurs when the module is improperly handled, can cause complete or intermittent failures. To prevent ESD-related damage:

- Always wear an ESD wrist strap connected to proper ground. Ensure that the wrist strap makes good skin contact.
- Keep the module in its antistatic shielded bag until you are ready to install it.
- Always handle the module by its edges.
- Do not touch the components, pins, leads, or solder connections.

Fiber Safety Precautions

The 1000BASE-SX Gigabit Ethernet modules use lasers in their fiber optic ports. To ensure your safety when you install or work with these modules, please comply with the precautions in this section.



WARNING: *The fiber optic lasers used in these modules meet the regulatory requirements for casual exposure to the eye. As with any source of bright light, however, 3Com recommends that you do not look into the laser light source.*

IEC 825, Class 1 Laser Devices are for connection only to Class 1 Laser Devices. MMF and SMF fiber optic interfaces use lasers.

**Before You Install**

Before you install your new module, follow the appropriate preinstallation instructions in this section, depending on whether you are installing the initial 1000BASE-SX module or replacing one.

Read before installing in an empty slot

Your CoreBuilder system is shipped with no modules installed and with protective faceplates covering the installation slots. Before you install the module, remove the protective faceplate that covers the selected installation slot.

To remove a faceplate:

- 1 Loosen the two captive screws that secure the faceplate to the chassis.
- 2 Move the injector/ejector handles to the outward position.

- 3 Pull the faceplate away from the system. See Figure 1. Save the faceplate for future use.

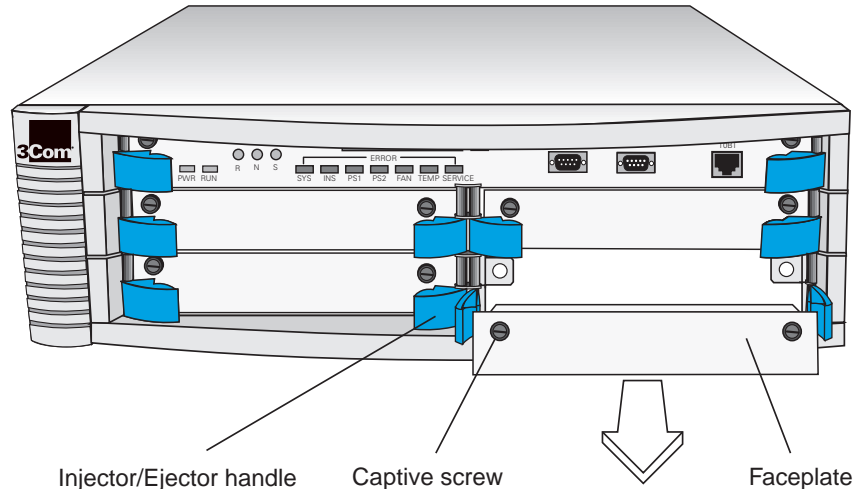


Figure 1 Removing the Faceplate

*Read before
removing a module*

You can remove a module while the system is on.

To remove a module:

- 1 Record the cabling scheme so that you can correctly recable the new module, and then disconnect the cables from the module's ports.
- 2 Loosen the two captive screws that secure the module to the chassis.
- 3 Move the injector/ejector handles to the outward position.
- 4 Gently slide the module out of the chassis.

Installing the Module

To install the new module into the CoreBuilder system, follow the steps in this section.



CAUTION: When you handle a module, 3Com recommends that you always use a wrist strap that is connected to a proper ground. This precaution helps prevent electrostatic discharge from damaging a module. Also, when you are not using the module, store it in an antistatic bag.

- 1 Put on the ESD wrist strap. Ensure that it makes good skin contact and that you are properly grounded.

- 2 Remove the module from its antistatic bag.



WARNING: If the system is on when you are installing the module, do not insert any metal object into the open slot (for example, a screwdriver or a finger with jewelry). Doing so can cause burns or other bodily harm, as well as system damage.

- 3 With the injector/ejector handles in the outward position, place the module between the guides of the selected slot and gently slide it into the chassis, as shown in Figure 2.

- 4 To engage the module and backplane connectors, move the injector handles to the inward position. You feel a slight resistance as the connectors engage.



CAUTION: If the resistance is too great, the module and backplane connectors may not be aligned. Forcing the module inward can damage the board or backplane connectors. If necessary, remove and reinsert the module, ensuring that the connectors are properly aligned. Do not tighten the captive screws to seat the module.

- 5 When you are sure that the connectors are properly aligned, tighten the captive screws to secure the module in the chassis.

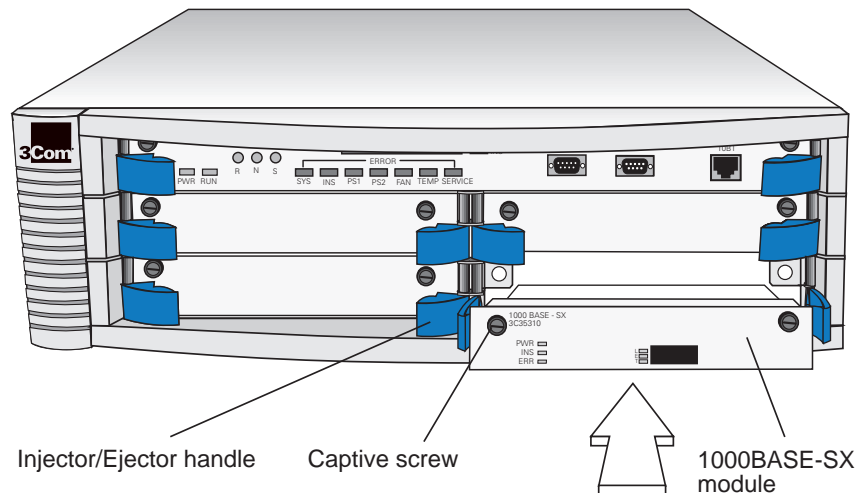


Figure 2 Installing the 1000BASE-SX Module

After you have installed the module, see Chapter 4 in your *Getting Started Guide* for information about cabling your module to the network.



The CoreBuilder system resets itself when you install a module with the power on or when you remove and reinstall the power cord.



If you physically change the configuration of the system after you define an IP interface, the port designated for that interface may no longer be valid. You may have to redefine the interface. For information about defining an IP interface, see the Administration Guide.

Module Diagnostics

The CoreBuilder system runs diagnostics tests at power up or when you replace a module with the power on. Watch for these indicators:

- During diagnostics tests, the module's **Error** LED lights yellow.
- When the diagnostics tests are successfully completed, the Error LED turns off and the port status **L** (Link Status) LED lights green.
- If a port status **E** (Error) LED remains yellow, the port is not operational.
- If the module's **Error** LED lights yellow, the module has failed a diagnostic test.

To troubleshoot module failures, see Chapter 7 in your *Getting Started Guide*.

3Com Corporation LIMITED WARRANTY

The duration of the warranty for the CoreBuilder™ 3500 1000BASE-SX Module (3C35310) is 1 year.

HARDWARE

3Com warrants its hardware products to be free from defects in workmanship and materials, under normal use and service, for the following lengths of time from the date of purchase from 3Com or its Authorized Reseller:

Network interface cards	Lifetime
Other hardware products (unless otherwise specified in the warranty statement above)	1 year
Spare parts and spares kits	90 days

If a product does not operate as warranted above during the applicable warranty period, 3Com shall, at its option and expense, repair the defective product or part, deliver to Customer an equivalent product or part to replace the defective item, or refund to Customer the purchase price paid for the defective product. All products that are replaced will become the property of 3Com. Replacement products may be new or reconditioned. Any replaced or repaired product or part has a ninety (90) day warranty or the remainder of the initial warranty period, whichever is longer.

3Com shall not be responsible for any software, firmware, information, or memory data of Customer contained in, stored on, or integrated with any products returned to 3Com for repair, whether under warranty or not.

SOFTWARE

3Com warrants that the software programs licensed from it will perform in substantial conformance to the program specifications therefor for a period of ninety (90) days from the date of purchase from 3Com or its Authorized Reseller. 3Com warrants the media containing software against failure during the warranty period. No updates are provided. The sole obligation of 3Com with respect to this express warranty shall be (at the discretion of 3Com) to refund the purchase price paid by Customer for any defective software products, or to replace any defective media with software which substantially conforms to applicable 3Com published specifications. Customer assumes responsibility for the selection of the appropriate applications program and associated reference materials. 3Com makes no warranty or representation that its software products will work in combination with any hardware or applications software products provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected. For any third-party products listed in the 3Com software product documentation or specifications as being compatible, 3Com will make reasonable efforts to provide compatibility, except where the noncompatibility is caused by a "bug" or defect in the third party's product.

STANDARD WARRANTY SERVICE

Standard warranty service for *hardware* products may be obtained by delivering the defective product, accompanied by a copy of the dated proof of purchase, to the 3Com Corporate Service Center or to an Authorized 3Com Service Center during the applicable warranty period. Standard warranty service for *software* products may be obtained by telephoning the 3Com Corporate Service Center or an Authorized 3Com Service Center, within the warranty period. Any products returned to the 3Com Corporate Service Center must be preauthorized by 3Com with a Return Material Authorization (RMA) number marked on the outside of the package, and sent prepaid, insured, and packaged appropriately for safe shipment. The repaired or replacement item will be shipped to Customer, at the expense of 3Com, not later than thirty (30) days after receipt of the defective product by 3Com.

WARRANTIES EXCLUSIVE

IF A 3COM PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY FOR BREACH OF THAT WARRANTY SHALL BE REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT THE OPTION OF 3COM. TO THE FULL EXTENT ALLOWED BY LAW, THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, TERMS, OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES, TERMS, OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND SATISFACTORY QUALITY. 3COM NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, OR USE OF ITS PRODUCTS.

3COM SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY

TO THE FULL EXTENT ALLOWED BY LAW, 3COM ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF 3COM OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT THE OPTION OF 3COM. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

GOVERNING LAW

This Limited Warranty shall be governed by the laws of the State of California, U.S.A. Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to you. This warranty gives you specific legal rights, which may vary depending on local law.

3Com Corporation, 5400 Bayfront Plaza, Santa Clara, CA 95052-8145 (408) 764-5000

3Com Corporation
5400 Bayfront Plaza
Santa Clara, California
95052-8145

Copyright © 1998, 3Com Corporation. All rights reserved. No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without permission from 3Com Corporation.

3Com Corporation reserves the right to revise this documentation and to make changes in content from time to time without obligation on the part of 3Com Corporation to provide notification of such revision or change.

3Com Corporation provides this documentation without warranty, term, or condition of any kind, either implied or expressed, including, but not limited to, the implied warranties, terms, or conditions of merchantability, satisfactory quality, and fitness for a particular purpose. 3Com may make improvements or changes in the product(s) and/or the program(s) described in this documentation at any time.

Unless otherwise indicated, 3Com registered trademarks are registered in the United States and may or may not be registered in other countries.

3Com and the 3Com logo are registered trademarks of 3Com Corporation. CoreBuilder is a trademark of 3Com Corporation.

All other company and product names may be trademarks of the respective companies with which they are associated.

Part No. 10005366
Published April 1998